



Norstar Meridian CICS System Administrator How to Change Time and Date

Press "FEAT".
Press ""*"
Press "*"."
Press "266344" (CONFIG) or "23646" (ADMIN).
Enter password "23646" (ADMIN) or "72787" (SCPLUS) .
You will see "Terminals & Sets".
Press "Next" five times.
Press "Show".

1. You will see "Hour".
2. Press "Change" or press "Next" if no change is required.
3. Type in the hour using military time as a 2 digit number.
4. Press "Next".

5. You will see "Minutes".
6. Press "Change" or press Next if no change is required.
7. Type in the minutes using a 2 digit number.
8. Press "Next".

9. You will see "Year"
10. Press "Change" or press Next if no change is required.
11. Type in the year using last 2 digits.
12. Press "Next"

13. You will see "Month"
14. Press "Change" or press Next if no change is required.
15. Type in the month using 2 digits.
16. Press "Next".

17. You will see "Day".
18. Press "Change" or press "Next" if no change is required.
19. Type in the day using 7 day format.
20. Press "Next".
21. You will see "End of List".
22. Press "Rls "to exit (orange button to the right of the number buttons).

Complements of:
Main Resource, Inc.
74 Evergreen Drive
Portland, ME 04103
800 362-6740
www.MainResource.com
All Rights Reserved

